

7200 Hollister Ave, Suite C, Goleta, CA 93117 PH: (805) 562-8600 • FAX: (805) 562-8661 info@weddleindustries.com

Updated 4/23/11

# 9007-INST

## SPIRAL LOCKS FOR STOCK VW 091 MAINSHAFT

### **GENERAL NOTES**

For increased strength, our 1.56, 1.60, 1.67, 1.71, 1.78, and 1.84 ratio 3rd and 4th gears are manufactured with a 36mm bearing bore instead of the standard 38mm bore. This requires the use of special spiral locks to fit inside the smaller bore of the gear.

### INSTALLATION INSTRUCTIONS

Replace each stock 091 3rd-4th slider hub circlip with *two* of our special spiral locks (part # 9007). Using a small screwdriver, lift one end of the first spiral lock onto the shaft and carefully wind the spiral lock into the circlip groove. Repeat this procedure for the second spiral lock so that the two spiral locks are in position side by side. Take care not to stretch the spiral locks any more than absolutely necessary to ensure a snug fit in the circlip groove. It will take some patience do this properly. If a spiral lock becomes damaged (stretched out) during installation, it will have to be discarded and replaced with a new one.

© Copyright 2000-2011 Weddle Industries



7200 Hollister Ave, Suite C, Goleta, CA 93117 PH: (805) 562-8600 • FAX: (805) 562-8661 info@weddleindustries.com

Updated 4/23/11

## 9007-INST

## SPIRAL LOCKS FOR STOCK VW 091 MAINSHAFT

#### **GENERAL NOTES**

For increased strength, our 1.56, 1.60, 1.67, 1.71, 1.78, and 1.84 ratio 3rd and 4th gears are manufactured with a 36mm bearing bore instead of the standard 38mm bore. This requires the use of special spiral locks to fit inside the smaller bore of the gear.

### INSTALLATION INSTRUCTIONS

Replace each stock 091 3rd-4th slider hub circlip with *two* of our special spiral locks (part # 9007). Using a small screwdriver, lift one end of the first spiral lock onto the shaft and carefully wind the spiral lock into the circlip groove. Repeat this procedure for the second spiral lock so that the two spiral locks are in position side by side. Take care not to stretch the spiral locks any more than absolutely necessary to ensure a snug fit in the circlip groove. It will take some patience do this properly. If a spiral lock becomes damaged (stretched out) during installation, it will have to be discarded and replaced with a new one.



7200 Hollister Ave, Suite C, Goleta, CA 93117 PH: (805) 562-8600 • FAX: (805) 562-8661 info@weddleindustries.com

Updated 4/23/11

# 9007-INST

## SPIRAL LOCKS FOR STOCK VW 091 MAINSHAFT

### **GENERAL NOTES**

For increased strength, our 1.56, 1.60, 1.67, 1.71, 1.78, and 1.84 ratio 3rd and 4th gears are manufactured with a 36mm bearing bore instead of the standard 38mm bore. This requires the use of special spiral locks to fit inside the smaller bore of the gear.

### **INSTALLATION INSTRUCTIONS**

Replace each stock 091 3rd-4th slider hub circlip with *two* of our special spiral locks (part # 9007). Using a small screwdriver, lift one end of the first spiral lock onto the shaft and carefully wind the spiral lock into the circlip groove. Repeat this procedure for the second spiral lock so that the two spiral locks are in position side by side. Take care not to stretch the spiral locks any more than absolutely necessary to ensure a snug fit in the circlip groove. It will take some patience do this properly. If a spiral lock becomes damaged (stretched out) during installation, it will have to be discarded and replaced with a new one.

© Copyright 2000-2011 Weddle Industries



7200 Hollister Ave, Suite C, Goleta, CA 93117 PH: (805) 562-8600 • FAX: (805) 562-8661 info@weddleindustries.com

Updated 4/23/11

## 9007-INST

## SPIRAL LOCKS FOR STOCK VW 091 MAINSHAFT

#### **GENERAL NOTES**

For increased strength, our 1.56, 1.60, 1.67, 1.71, 1.78, and 1.84 ratio 3rd and 4th gears are manufactured with a 36mm bearing bore instead of the standard 38mm bore. This requires the use of special spiral locks to fit inside the smaller bore of the gear.

### **INSTALLATION INSTRUCTIONS**

Replace each stock 091 3rd-4th slider hub circlip with *two* of our special spiral locks (part # 9007). Using a small screwdriver, lift one end of the first spiral lock onto the shaft and carefully wind the spiral lock into the circlip groove. Repeat this procedure for the second spiral lock so that the two spiral locks are in position side by side. Take care not to stretch the spiral locks any more than absolutely necessary to ensure a snug fit in the circlip groove. It will take some patience do this properly. If a spiral lock becomes damaged (stretched out) during installation, it will have to be discarded and replaced with a new one.

© Copyright 2000-2011 Weddle Industries